
Elevator air conditioner cleaning and maintenance content and steps

The elevator air conditioner should be cleaned and maintained regularly. In order to improve the cooling effect, save electricity and prolong the service life of the air conditioner, it is recommended to clean the three filters of the air conditioner once a month (see the figure below for the specific location).

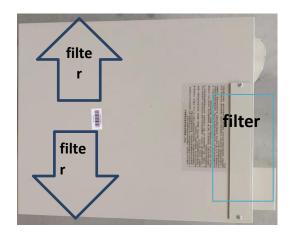

1. The filter on the side of the evaporator (air inlet): Unscrew the two self-tapping screws on the box cover, pull it out, rinse it with clean water, and dry it before putting it back.



2. **Filters on both sides of the air conditioner:** first go out, and then lift up to remove, rinse with clean water after removal, spin dry, and then put back, one piece on the left and right sides; Install the bottom two buttons first, then the top button.

